

4-1. Maintenance and care 478

Cleaning and protecting
the vehicle exterior 478

Cleaning and protecting the
vehicle interior 480

4-2. Maintenance 483

Maintenance
requirements 483

General maintenance 485

Emission inspection and
maintenance (I/M)
programs 488

4-3. Do-it-yourself maintenance 489

Do-it-yourself service
precautions 489

Hood 492

Positioning the jack 493

Engine compartment 495

Tires 511

Tire inflation pressure 519

Wheels 523

Air conditioning filter 525

Electronic key battery 528

Checking and replacing
fuses 530

Headlight aim 547

Light bulbs 549